




CORRUGATED

INSTALLATION INSTRUCTIONS


STEP 1

Once posts and bottom rail are set, place one corrugated sheet into the bottom rail channel and post channel.

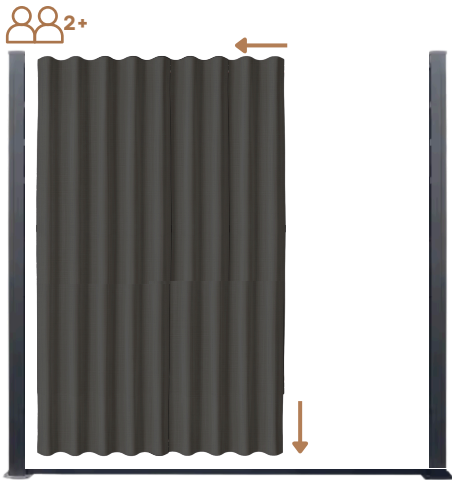


STEP 2

With one person holding the first sheet, guide the second sheet into the post channel and rail, while overlapping with the first sheet. If using 3 sheets, three people may be needed.

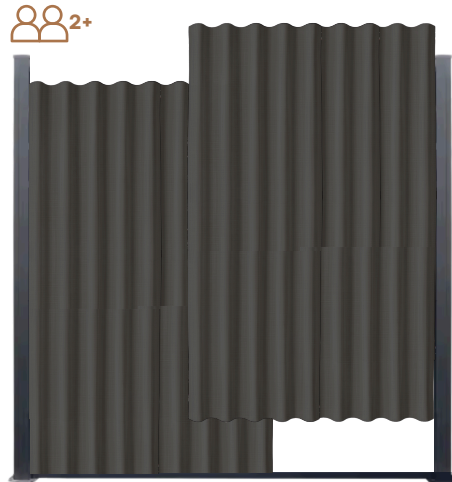


STEP 3

Starting at one end, hold the top rail with L-Brackets at an angle, slowly dropping the rail into place while capturing all ribs. This may be a tight fit. Secure L-Brackets.

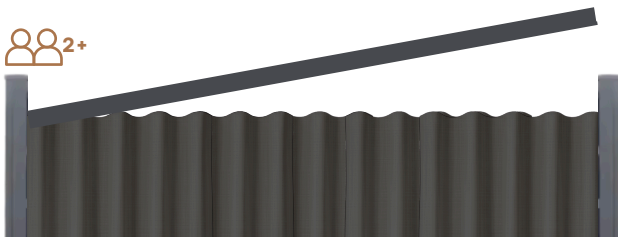

STEP 4

Break apart the foam closures and pick off some of the glue. Insert pieces into gaps as desired to prevent wind rattle.

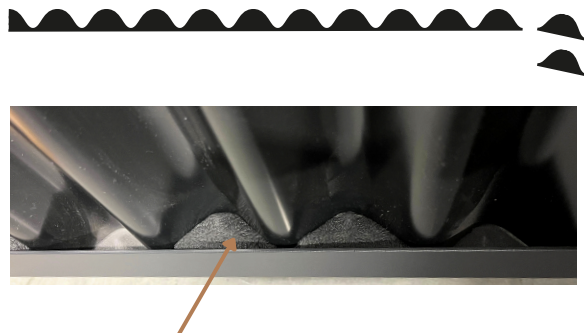

STEP 5

For 8' wide panels only

Add one Black Top Screw through the center of the top and bottom rail, fastening into the raised rib of the corrugated panel for additional support.

