




CORRUGATED

INSTALLATION INSTRUCTIONS

STEP 1

Once posts and bottom rail are set, place one corrugated sheet into the bottom rail channel and post channel.

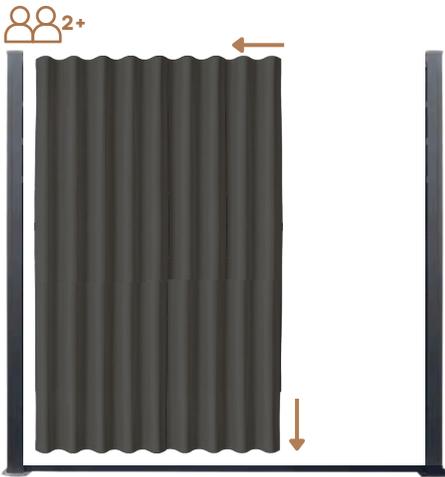


STEP 2

With one person holding the first sheet, guide the second sheet into the post channel and rail, while overlapping with the first sheet. If using 3 sheets, three people may be needed.



STEP 3

Starting at one end, hold the top rail with L-Brackets at an angle, slowly dropping the rail into place while capturing all ribs. This may be a tight fit. Secure L-Brackets.

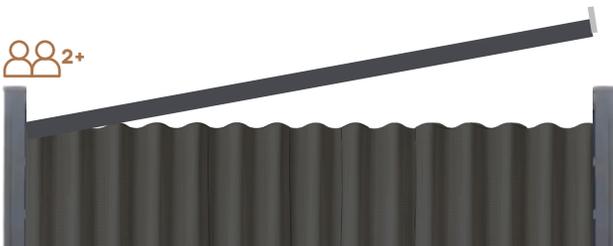

STEP 4

Break apart the foam closures and pick off some of the glue. Insert pieces into gaps as desired to prevent wind rattle.

